



REMOTE CONTROL RECO V220 / V281

USER´s Manual

Revision 1.0

With the optional remote control **RECO V220 / V281** for the headphone amps **HPA V220 / V281** you are able to

- select one of three inputs
- select two output functions
- release a mute / unmute
- control the volume

For that purpose a ALPS RK 27 potentiometer is present which is driven by a built-in gear motor. Of course the volume can be controlled manually all the time . even when the motor is in action !

The remote control itself is a universal programmable type, the model URC-7140 from One-For-All.


This remote control is capable to manage even more items of your personal stereo set. Learn how to proceed with the attached manual or follow the instructions on this site:

<http://www.oneforall.de/uploads/support/7ae414313a96d19ec40b4010b3c2e73d.pdf>

Feel free to transmit the infra-red codes from this remote control to your preferred model, when it is suited for this purpose.

The Operation

Your URC-7140 remote control is pre-installed to operate V220/281. When the AMP mode is selected by pushing one or more times the Mode switch, the inputs, mute and the volume may be controlled from the distance.

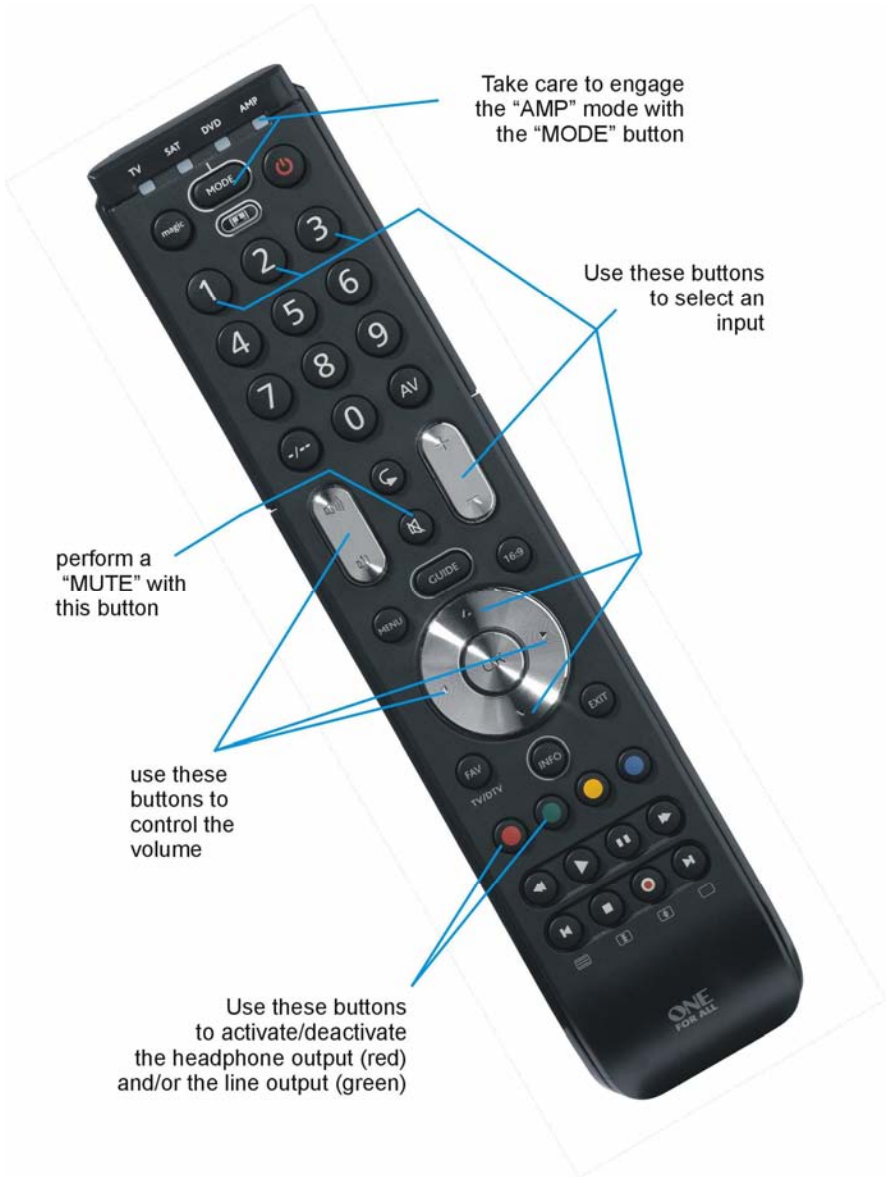

õ if you want to try yourself õ

Reset of the remote control:

- press %MAGIC% for 3 Seconds
- push 9 - 8 - 1 on the keyboard
- a Reset is performed

To program a foreign mode

The HPA V220 / V281 is controlled by a TV-Code !

Generally a TV code can only be programmed under the %TV+mode.

To enable the programming of a foreign mode (like %AMP+) the remote control can be prepared as follows:

- press %MAGIC% for 3 Seconds
- push 9 . 9 . 2 on the keyboard, a LED flashes 2 x
- select the mode which shall be copied by pushing the mode button several times (in this case sTV%)
- press %MAGIC% shortly, the %TV% LED flashes once
- select the destination mode by pushing the mode button several times (in this case %AMP%)
- press %MAGIC% for a longer time, the %AMP% LED flashes 2 x

Now you can program a %TV% Mode code in the %AMP% Mode !

Program the V220 / V281 code:

Please note: the code used for V220 / V281 is a very old TV code and so chances are high that no other electronic item is controlled accidentally.

Before entering a code the destination has to be prepared when the code is of %foreign+kind (see above).

- press %MAGIC% for 3 Seconds
- select the destination mode TV - SAT - DVD - AMP by pushing the mode button several times
- push 0 . 0 . 3 - 7 on the keyboard, the affiliated LED flashes several times

How to indentify a Code:

Attention: no flashing with number 0!!!

ExampleCode	0	0	3	7
Flashing	-	-	3	7
Key / Digit	No. 1	No. 2	No. 3	No. 4

- press **MAGIC** for 3 Seconds
- select the mode to be checked (TV - SAT - DVD . AMP) by pushing the mode button several times
- push 9 . 9 . 0 on the keyboard, the affiliated LED flashes once
- press key **1** on the keyboard, the value of the first digit is displayed by the flashing LED
- press key **2** on the keyboard, the value of the second digit is displayed by the flashing LED
- press key **3** on the keyboard, the value of the third digit is displayed by the flashing LED
- press key **0** on the keyboard, the value of the fourth digit is displayed by the flashing LED



LAKE PEOPLE

LAKE PEOPLE *electronic GmbH*

Turmstrasse 7a

D-78467 Konstanz

Fon +49 (0) 7531 73678

Fax +49 (0) 7531 74998

Web www.vioelectric.de

www.lake-people.de