



## REMOTE CONTROL RECO 630

# USER's Manual

Revision 1.0

With the optional remote control **RECO 630** for the preamplifier **PRE V630** you are able to

- select one of three inputs
- release a mute / unmute
- control the volume

For that purpose a RK 27 potentiometer from Alps is present which is driven by a built-in gear motor. Of course the volume can be controlled manually all the time – even when the motor is in action !

The remote control itself is a universal programmable type, the model URC-7140 from One-For-All.


This remote control is capable to manage even more items of your personal stereo set. Learn how to proceed with the attached manual or follow the instructions on this site:

<http://www.oneforall.de/uploads/support/7ae414313a96d19ec40b4010b3c2e73d.pdf>

Feel free to transmit the infra-red codes from this remote control to your preferred model, when it is suited for this purpose.

# The Operation

Your URC-7140 remote control is pre-installed to operate PRE V630. When the “AMP mode is selected by pushing one or more times the “Mode“- switch, the inputs, mute and the volume may be controlled from the distance.

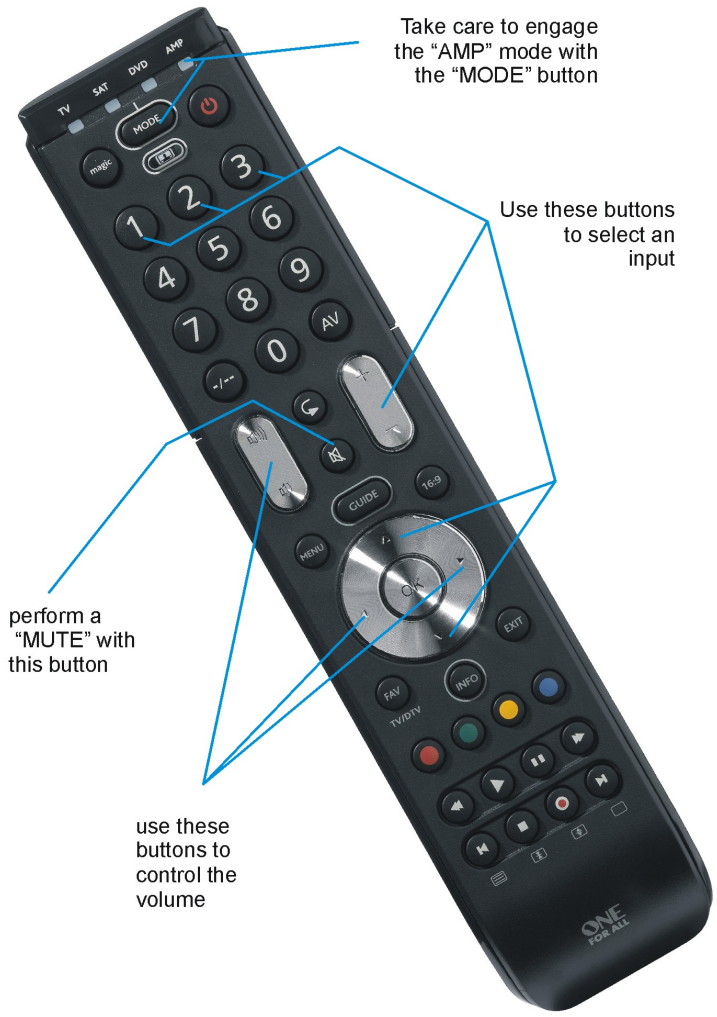

... if you want to try yourself ...

### **Reset of the remote control:**

- press "MAGIC" for 3 Seconds
- push 9 - 8 - 1 on the keyboard
- a Reset is performed

### **To program a „foreign“ mode**

The PRE V630 is controlled by a TV-Code !

Generally a TV code can only be programmed under the "TV" mode.

To enable the programming of a "foreign" mode (like "AMP") the remote control can be prepared as follows:

- press "MAGIC" for 3 Seconds
- push 9 – 9 – 2 on the keyboard, a LED flashes 2 x
- select the mode which shall be copied by pushing the mode button several times (in this case „TV“)
- press "MAGIC" shortly, the "TV"-LED flashes once
- select the destination mode by pushing the mode button several times (in this case "AMP")
- press "MAGIC" for a longer time, the "AMP"-LED flashes 2 x

Now you can program a "TV"- Mode code in the "AMP"- Mode !

### **Program the PRE V630 code:**

**Please note:** the code used for PRE V630 is a very old TV code and so chances are high that no other electronic item is controlled accidentally. Before entering a code the destination has to be prepared when the code is of "foreign" kind (see above).

- press "MAGIC" for 3 Seconds
- select the destination mode TV - SAT - DVD - AMP by pushing the mode button several times
- push 0 – 0 – 3 - 7 on the keyboard, the affiliated LED flashes several times

## How to indentify a Code:

**Attention: no flashing with number "0" !!**

ExampleCode	0	0	3	7
Flashing	-	-	3	7
Key / Digit	No. 1	No. 2	No. 3	No. 4

- press "MAGIC" for 3 Seconds
- select the mode to be checked (TV - SAT - DVD – AMP) by pushing the mode button several times
- push 9 – 9 – 0 on the keyboard, the affiliated LED flashes once
- press key "1" on the keyboard, the value of the first digit is displayed by the flashing LED
- press key "2" on the keyboard, the value of the second digit is displayed by the flashing LED
- press key "3" on the keyboard, the value of the third digit is displayed by the flashing LED
- press key "4" on the keyboard, the value of the fourth digit is displayed by the flashing LED



**LAKE PEOPLE**

**LAKE PEOPLE *electronic GmbH***

**Turmstrasse 7a**

**D-78467 Konstanz**

**Fon +49 (0) 7531 73678**

**Fax +49 (0) 7531 74998**

**Web [www.vioelectric.de](http://www.vioelectric.de)**

**[www.lake-people.de](http://www.lake-people.de)**